## SICERATM CRYOPUMP







Starting at only 0.9kW per pump, the SICERA<sup>TM</sup> cryopump features low energy consumption compared with other vacuum products currently available for semiconductor, flat panel display and related processing. SICERA utilizes SHI proprietary inverter technology to reduce customer energy costs 20-30%. The breakthrough multi-pump system allows up to six 8-inch pumps to run on a single compressor without performance degradation, making it ideal for high-volume semiconductor wafer manufacturing.

The complete SICERA cryopump system includes a compressor and remote controller, which have been thoroughly tested to withstand the most demanding vacuum applications. Through continuous control of both the cryocooler and compressor, SHI Cryogenics Group is able to offer a reliable cryopump system with significant energy savings, as well as excellent temperature and vacuum stability.

## **Features**

- Extremely low energy consumption
- Real multi-pump system
- Fully automated regeneration
- Robust and solid performance
- Supported by a worldwide sales and service network


## **Specifications**

NA - d - l - .

Models:		KZ-8L3 (8 inch)	KZ-12L3N (12 inch)
Pumping Speeds:	Air Water Argon Hydrogen	1500 L/sec 4000 L/sec 1250 L/sec 2200 L/sec	3300 L/sec 9500 L/sec 2700 L/sec 6000 L/sec
Throughput:	Argon	8.86 torr-liters/sec (700 sccm)	8.86 torr-liters/sec (700 sccm)
Capacity:	Argon Hydrogen	1000 standard liters 12 standard liters	2000 standard liters 30 standard liters
Crossover Rating:		150 torr-liters	150 torr-liters
Regeneration Time:		120 minutes	150 minutes
Power Consumption:		0.9 kW/pump	1.5 kW/pump

7 01 0 (0 :-- - |-)

<sup>\*</sup> Complete system includes a compressor and remote controller, not shown

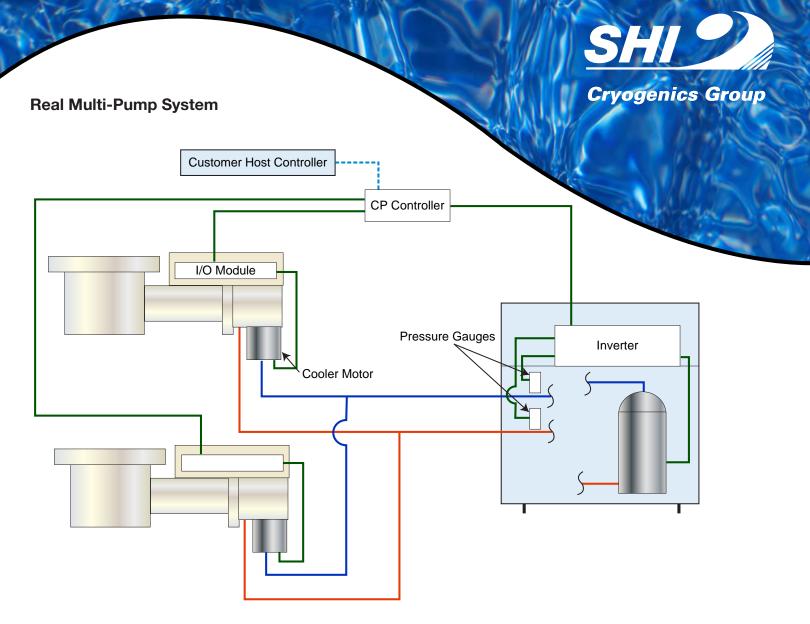

# For Information in: Asia

### Sumitomo Heavy Industries, Ltd.

ThinkPark Tower Cryogenics Division, Sales Department

1-1, Osaki 2-Chome, Shinagawa-Ku Tokyo 141-6025, Japan Phone: +81-3-6737-2550

Phone: +81-3-6737-2550 Fax: +81-3-6866-5114 E-mail: cryo@shi.co.jp

#### Sumitomo Heavy Industries (Shanghai), Ltd.

Room 1301, Xingdi Business Building 1698 Yishan Road, Minhang District Shanghai 201103, P.R. China Phone: +86-21-3462-7660 Fax: +86-21-3462-7661 E-mail: Jin-Lin\_Gao@shi.co.jp

## SHI Cryogenics of Korea Co., Ltd.

Room 619-620, Venture Valley #958 Goseck-Dong, Kwonsun-Gu Suwon-City, Gyeonggi-Do, South Korea

Phone: +82-31-278-3050 Fax: +82-31-278-3053

E-mail: Won\_Bum\_Lee@shi.co.jp

## **Europe**

## Sumitomo (SHI) Cryogenics of Europe, Ltd.

3 Hamilton Close, Houndmills Industrial Estate Basingstoke, Hampshire RG21 6YT

United Kingdom

Phone: +44 (0) 1256 853333 Fax: +44 (0) 1256 471507

E-mail: uksales@shicryogenics.com

## Sumitomo (SHI) Cryogenics of Europe, GmbH

Daimlerweg 5a

Darmstadt D-64293, Germany Phone: +49 (0) 6151 860 610 Fax: +49 (0) 6151 800 252

E-mail: contact@sumitomocryo.de

World Wide Web: www.shicryogenics.com

## **United States**

## Sumitomo (SHI) Cryogenics of America, Inc.

1833 Vultee Street Allentown, PA 18103 Phone: +1 610-791-6700 Fax: +1 610-791-0440

E-mail: sales@shicryogenics.com

## Sumitomo (SHI) Cryogenics of America, Inc.

456 Oakmead Parkway Sunnyvale, CA 94085 Phone: +1 408-736-4406 Fax: +1 408-736-7325

## Sumitomo (SHI) Cryogenics of America, Inc.

1500-C Higgins Road Elk Grove Village, IL 60007 Phone: +1 847-290-5801 Fax: +1 847-290-1984

© SHI Cryogenics Group 10/09